


Depth

Determines the final machining depth for the toolpath.

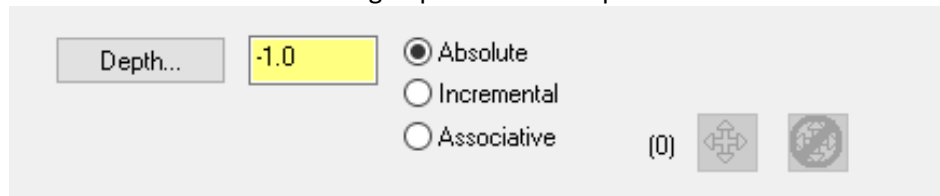

Setting / Parameter	Affect
Chained Geometry Location	Will affect Depth if Depth is set to incremental
Clearance Value	No direct affect on Depth.
Retract Value	No direct affect on Depth.
Feed Plane Value	No direct affect on Depth.
Top of Stock Value	No direct affect on Depth.
Absolute setting	Depth is set at a specific height relative to origin. The Depth is at a fixed location and can only move if the origin is changed or modified.
Incremental setting	Depth is a distance from the chained geometry. The Depth will move if the chained geometry moves.
Associative setting	Depth is a distance from a selected point in the file. The Depth will change if the location of this point changes.